
EXHAUST SYSTEM

EXHAUST PIPES AND HEAT INSULATORS

COMPONENTS

4A-FE (CALIF.)

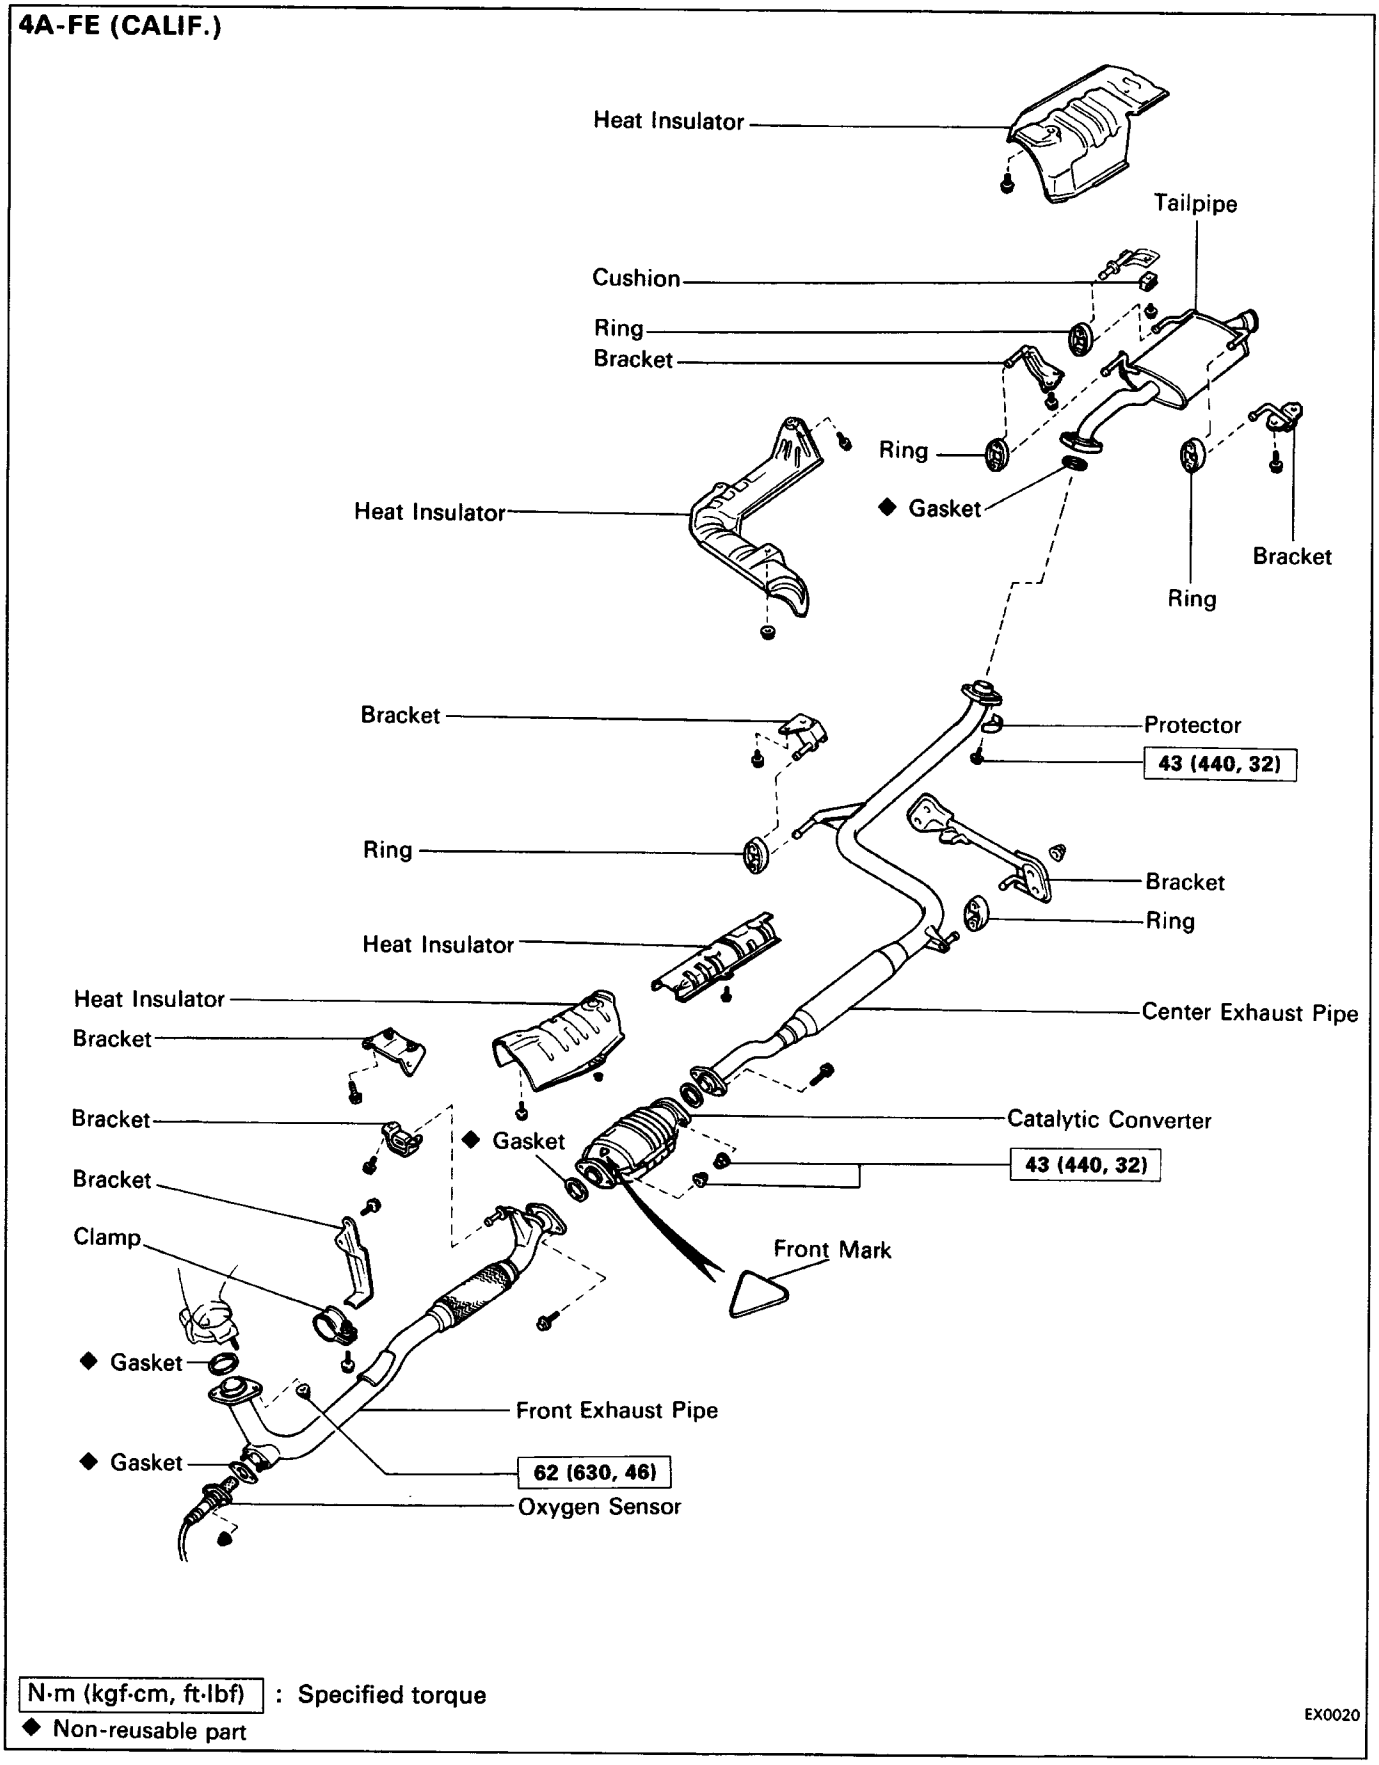


N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non-reusable part

EX0020

COMPONENTS

4A-FE (Ex. CALIF.)

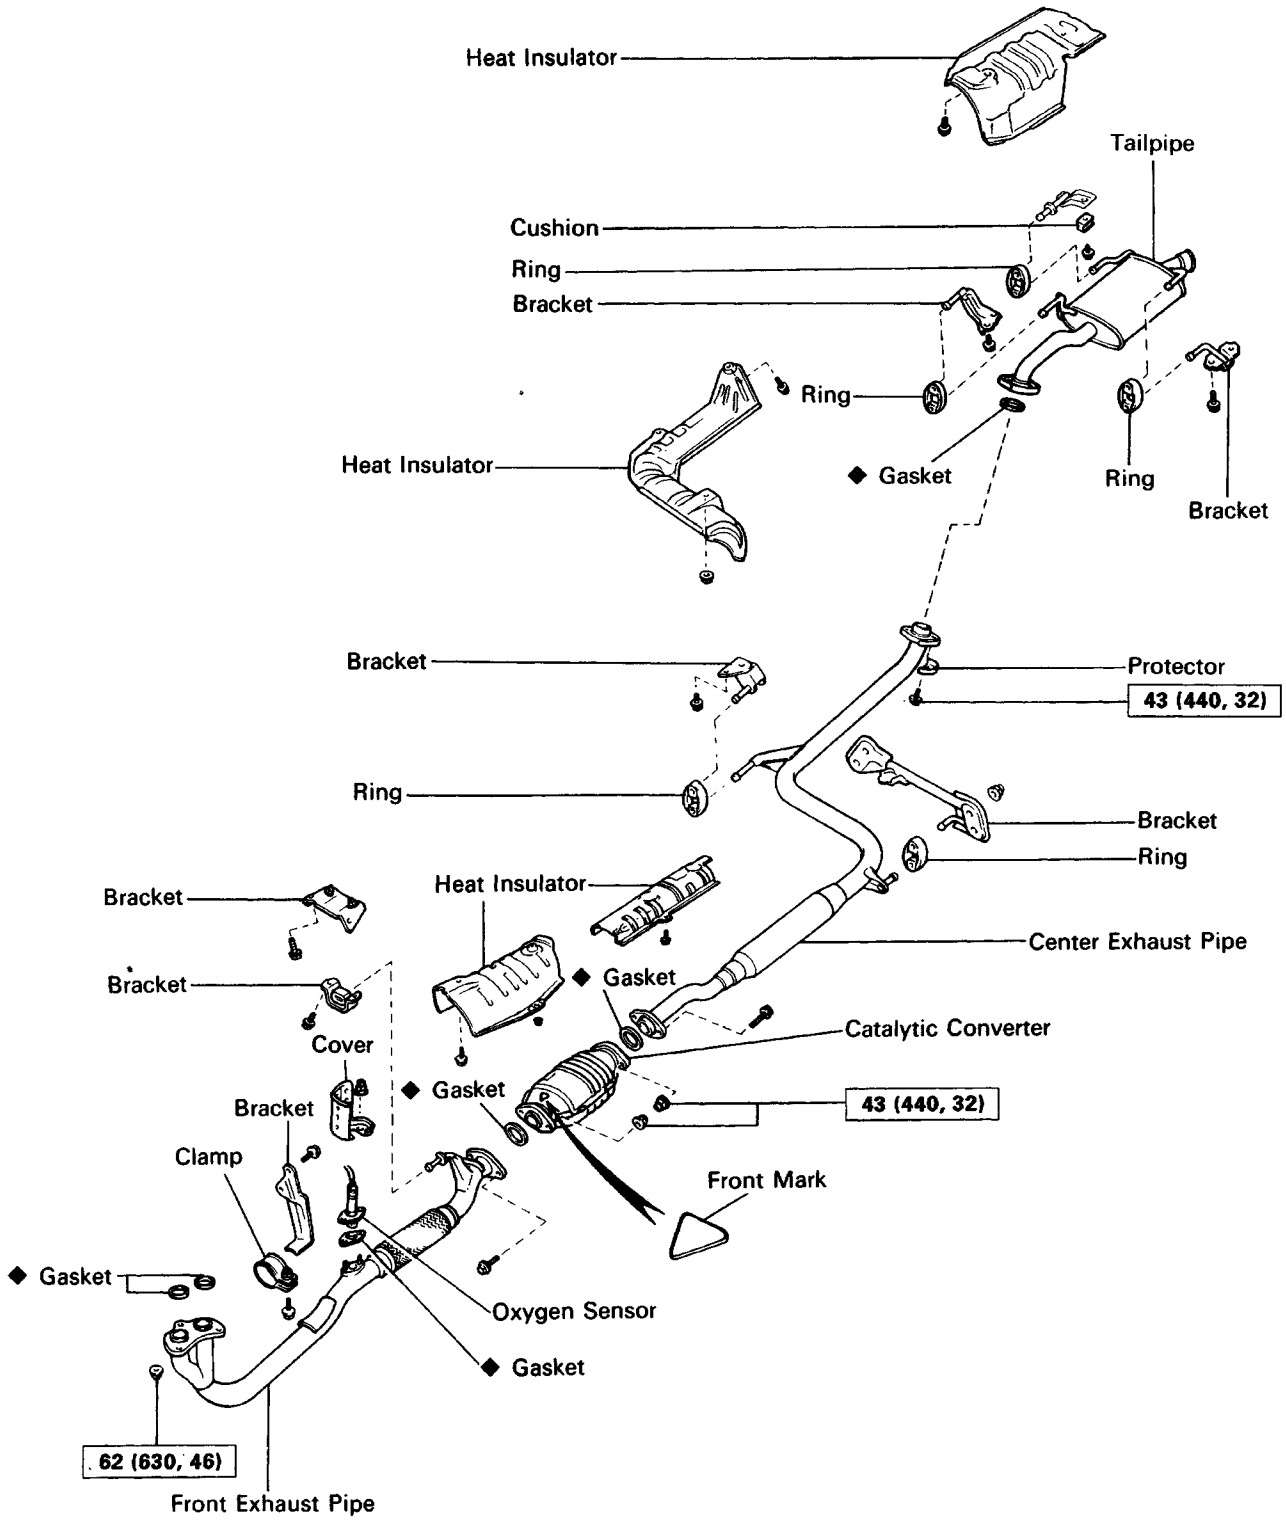

N·m (kgf·cm, ft·lbf) : Specified torque


◆ Non-reusable part

EX0021

EXHAUST PIPES AND HEAT INSULATORS

COMPONENTS

3S-GTE

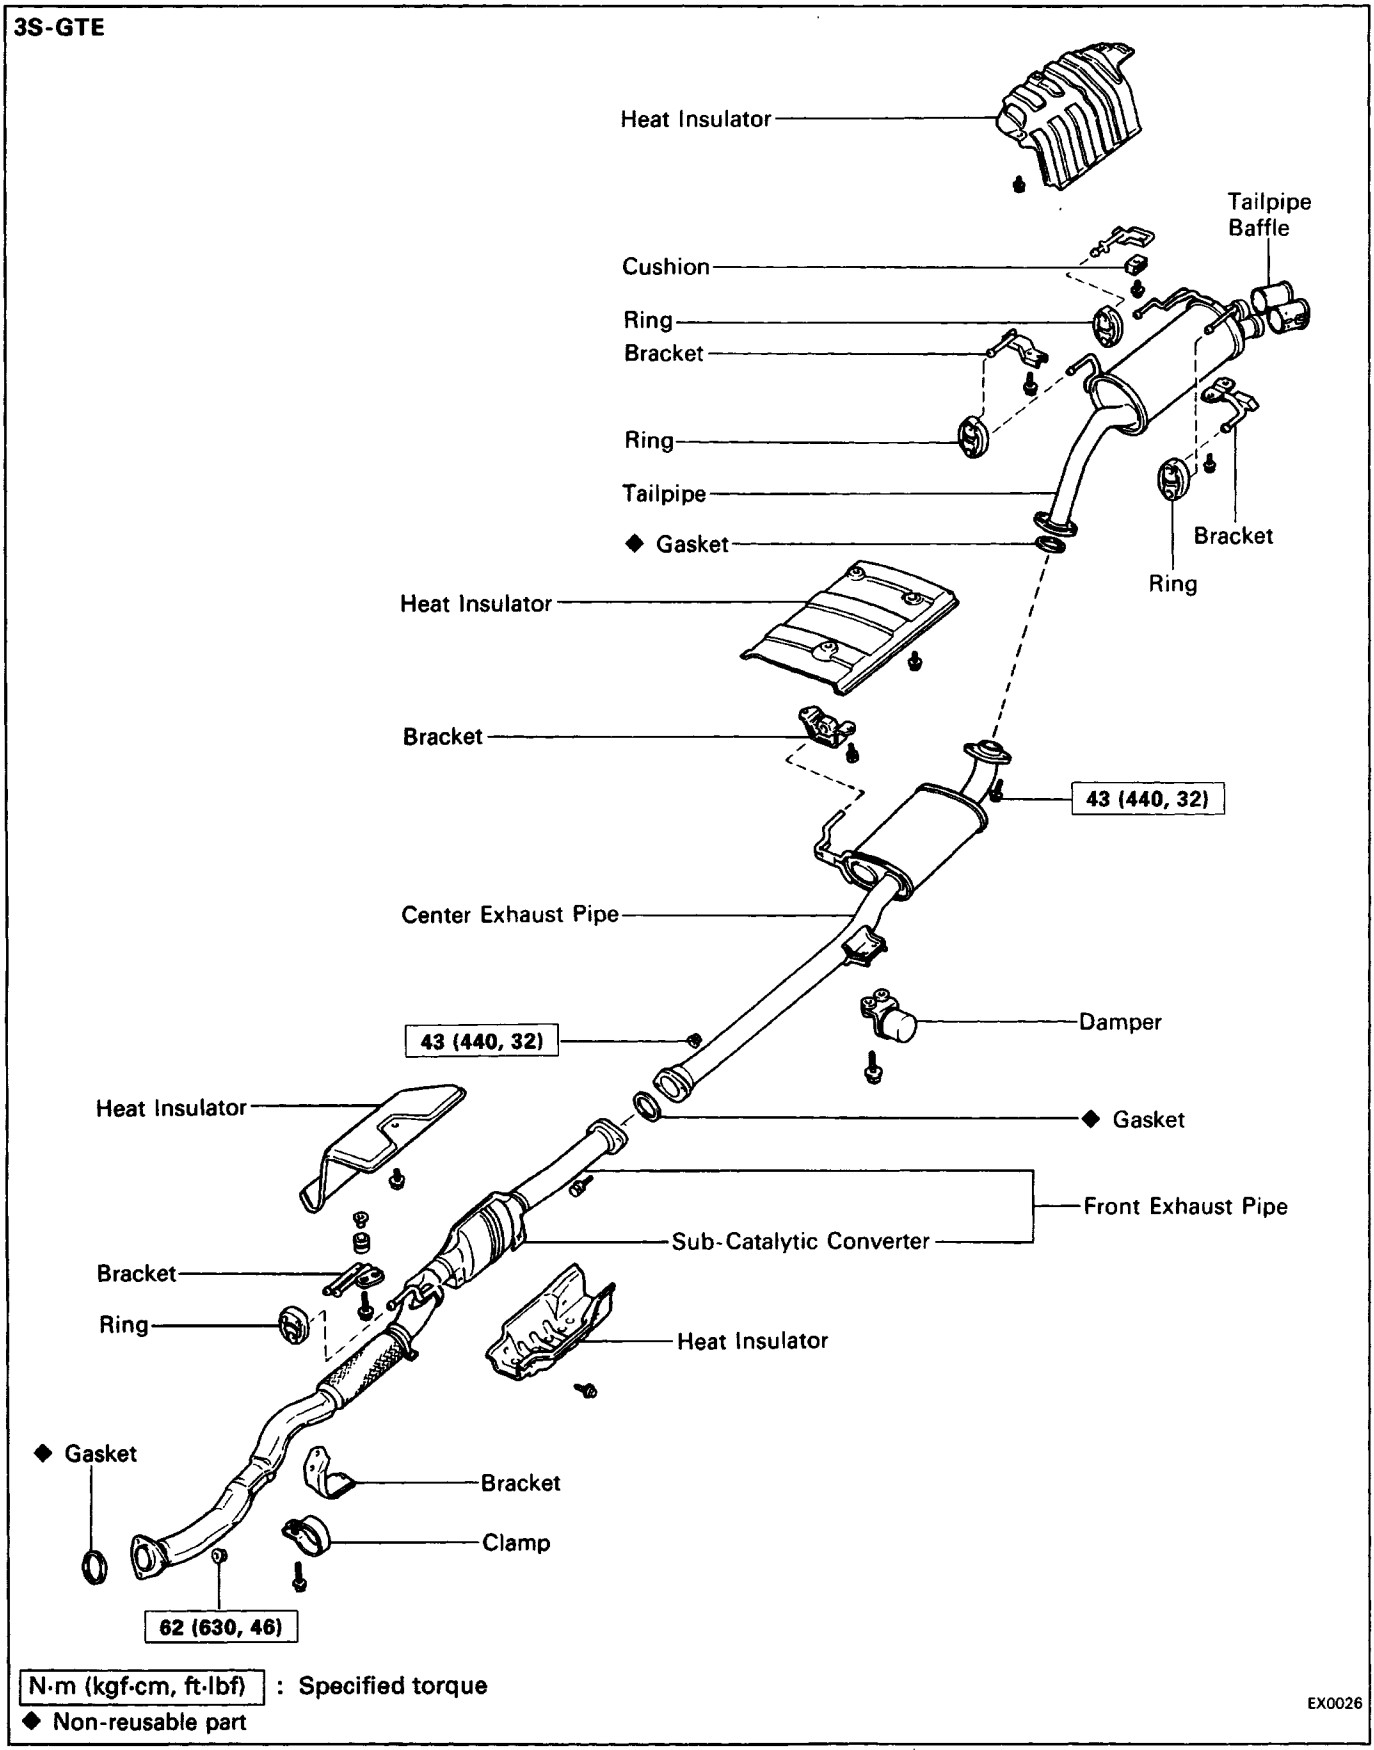


N·m (kgf·cm, ft·lbf) : Specified torque


◆ Non-reusable part

EX0026

COMPONENTS

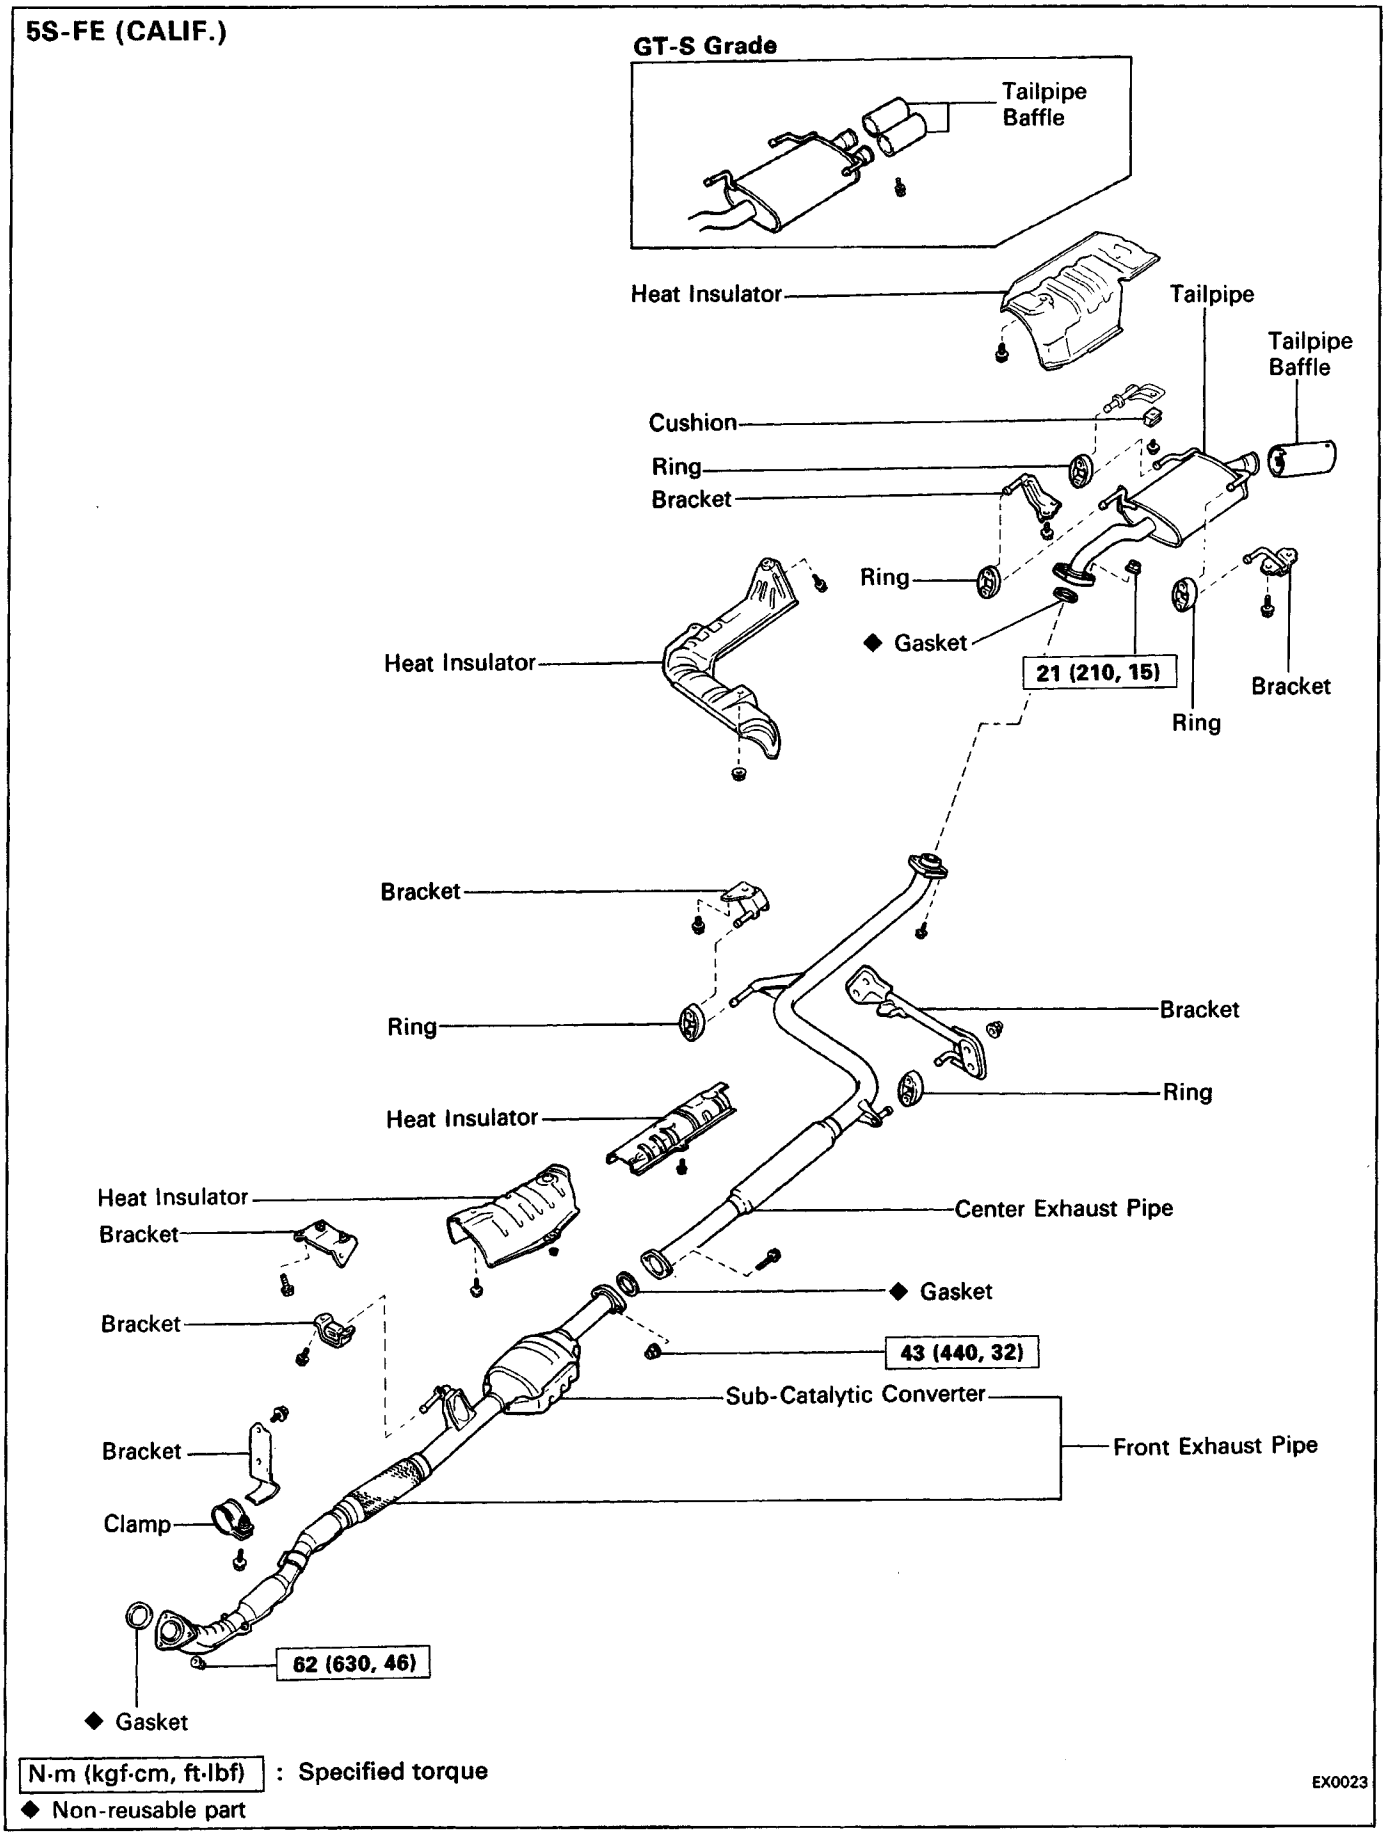
5S-FE (CALIF.)
GT-S Grade
Tailpipe Baffle
Heat Insulator
Tailpipe
Tailpipe Baffle
Cushion
Ring
Bracket
Ring
Heat Insulator
◆ Gasket
21 (210, 15)
Bracket
Ring
Bracket
Bracket
Ring
Heat Insulator
Heat Insulator
Bracket
Center Exhaust Pipe
◆ Gasket
Bracket
43 (440, 32)
Sub-Catalytic Converter
Front Exhaust Pipe
Bracket
Clamp
62 (630, 46)
◆ Gasket
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non-reusable part
EX0023

COMPONENTS

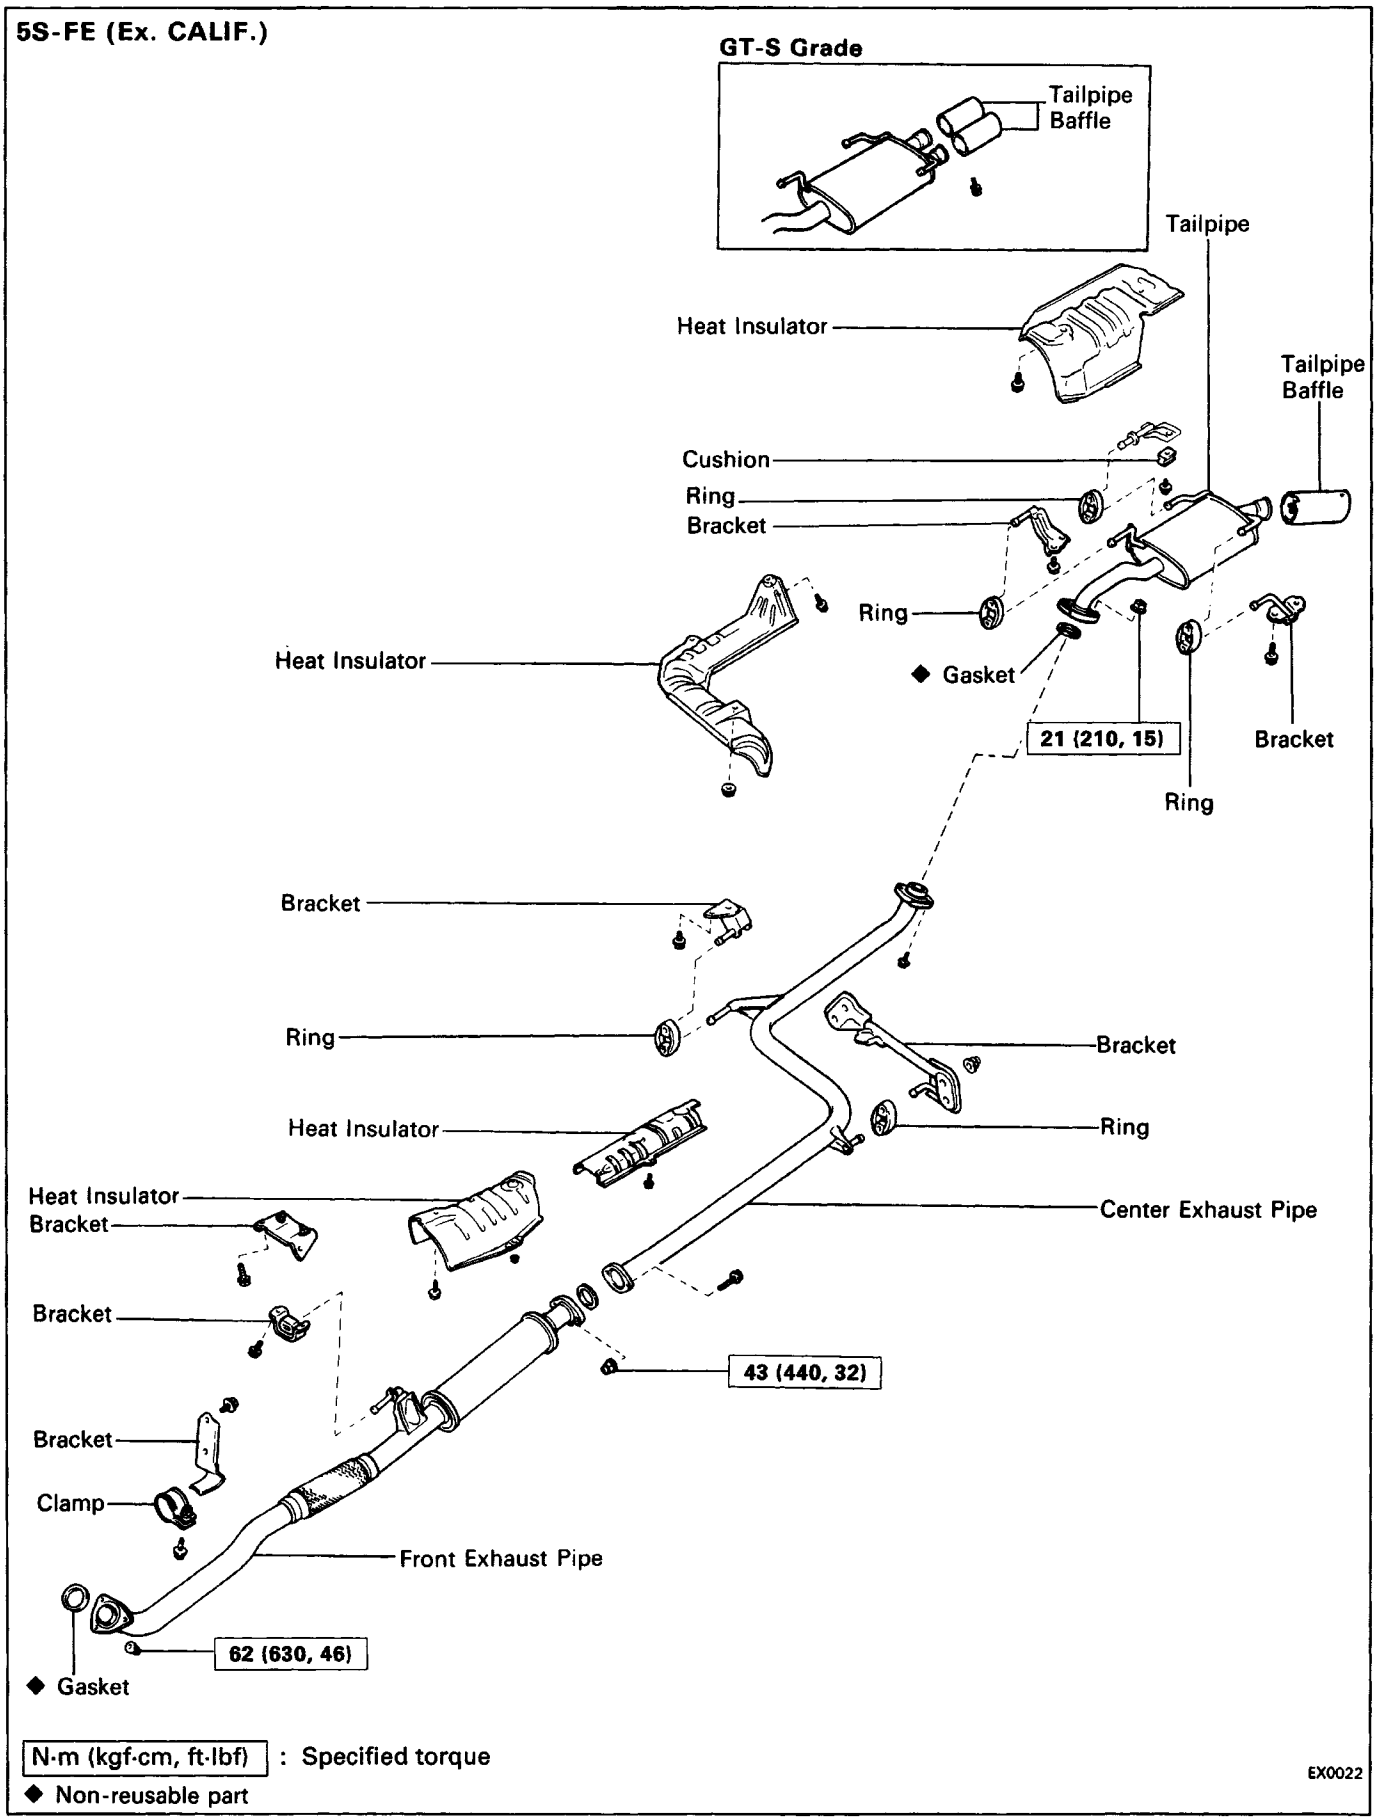
5S-FE (Ex. CALIF.)
GT-S Grade
Tailpipe Baffle
Tailpipe
Heat Insulator
Tailpipe Baffle
Cushion
Ring
Bracket
Ring
Heat Insulator
◆ Gasket
21 (210, 15)
Bracket
Ring
Bracket
Ring
Bracket
Heat Insulator
Ring
Heat Insulator
Center Exhaust Pipe
Bracket
43 (440, 32)
Bracket
Bracket
Clamp
Front Exhaust Pipe
62 (630, 46)
◆ Gasket
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non-reusable part
EX0022